

North/Latin America Europe/Africa Asia/Oceania

Internal Use Only

http://aic.lgservice.com http://eic.lgservice.com http://biz.lgservice.com

LED LCD TV SERVICE MANUAL

CHASSIS: LJ01M

MODEL: 32LV3500 32LV3500-SG

CAUTION

BEFORE SERVICING THE CHASSIS, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

P/NO : MFL67289405 (1109-REV00) Printed in Korea

CONTENTS

| CONTENTS | 2 |
|------------------------|----|
| SAFETY PRECAUTIONS | 3 |
| SPECIFICATION | 6 |
| ADJUSTMENT INSTRUCTION | 11 |
| EXPLODED VIEW | 16 |
| SVC. SHEET | |

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by $ilde{\Lambda}$ in the Schematic Diagram and Exploded View.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and it's components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1W), keep the resistor 10mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Before returning the receiver to the customer,

always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1M Ω and 5.2M Ω .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.


Connect 1.5K/10watt resistor in parallel with a 0.15uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which is corresponds to 0.5mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

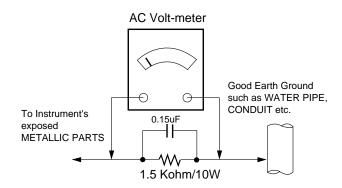

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the SAFETY PRECAUTIONS on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

- Always unplug the receiver AC power cord from the AC power source before;
 - Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.
 - **CAUTION:** A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
- Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe.
 Do not test high voltage by "drawing an arc".
- Do not spray chemicals on or near this receiver or any of its assemblies
- 4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength)

CAUTION: This is a flammable mixture.

- Unless specified otherwise in this service manual, lubrication of contacts in not required.
- 5. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
- Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
- Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
 - Always remove the test receiver ground lead last.
- Use with this receiver only the test fixtures specified in this service manual.

CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called *Electrostatically Sensitive (ES) Devices*. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

 Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.

- After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
- Use only a grounded-tip soldering iron to solder or unsolder ES
 devices
- Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
- 5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
- 6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
- Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

 Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

- Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500°F to 600°F.
- Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
- 3. Keep the soldering iron tip clean and well tinned.
- Thoroughly clean the surfaces to be soldered. Use a mall wirebristle (0.5 inch, or 1.25cm) brush with a metal handle.
 Do not use freon-propelled spray-on cleaners.
- 5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature. (500°F to 600°F)
 - b. Heat the component lead until the solder melts.
 - Quickly draw the melted solder with an anti-static, suctiontype solder removal device or with solder braid.
 CAUTION: Work quickly to avoid overheating the circuit board printed foil.
- 6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature (500°F to 600°F)
 - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
 - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
 - **CAUTION:** Work quickly to avoid overheating the circuit board printed foil.
 - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

- Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
- Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

- 1. Carefully insert the replacement IC in the circuit board.
- Carefully bend each IC lead against the circuit foil pad and solder it.
- Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor

Removal/Replacement

- 1. Remove the defective transistor by clipping its leads as close as possible to the component body.
- Bend into a "U" shape the end of each of three leads remaining on the circuit board.
- 3. Bend into a "U" shape the replacement transistor leads.
- 4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device Removal/Replacement

- 1. Heat and remove all solder from around the transistor leads.
- 2. Remove the heat sink mounting screw (if so equipped).
- Carefully remove the transistor from the heat sink of the circuit board.
- 4. Insert new transistor in the circuit board.
- 5. Solder each transistor lead, and clip off excess lead.
- 6. Replace heat sink.

Diode Removal/Replacement

- Remove defective diode by clipping its leads as close as possible to diode body.
- Bend the two remaining leads perpendicular y to the circuit board.
- Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
- 4. Securely crimp each connection and solder it.
- Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor

Removal/Replacement

- Clip each fuse or resistor lead at top of the circuit board hollow stake.
- Securely crimp the leads of replacement component around notch at stake top.
- 3. Solder the connections.

CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

- 1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
- carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
- 3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
- 4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

- Remove the defective copper pattern with a sharp knife.
 Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
- Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
- Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side.

Carefully crimp and solder the connections.

CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

SPECIFICATION

NOTE: Specifications and others are subject to change without notice for improvement.

1. Application range

This spec sheet is applied LCD TV with LJ01M/P/R chassis.

2. Requirement for Test

Each part is tested as below without special appointment.

- 1) Temperature: $25 \, ^{\circ}\text{C} \pm 5 \, ^{\circ}\text{C}$ 2) Relative Humidity: $65 \pm 10 \, \%$
- 3) Power Voltage: Standard input voltage(100-240V~, 50/60Hz)* Standard Voltage of each product is marked by models
- Specification and performance of each parts are followed each drawing and specification by part number in accordance with BOM.
- 5) The receiver must be operated for about 5 minutes prior to the adjustment.

3. Test method

- 1) Performance: LGE TV test method followed
- 2) Demanded other specification
 - Safety : UL, CSA, IEC specification
 - EMC: FCC, ICES, IEC specification

4. General Specification(TV)

| No | Item | Specification | | | Remark |
|----|-------------------------|----------------------------|-----------------|-----|-------------------------------------|
| 1 | Receivable System | 1) SBTV/NTSC/PAL-M/PAL-N | | | |
| 2 | Available Channel | 1) VHF : 02 ~ 13 | | | |
| | | 2) UHF : 14 ~ 69 | | | |
| | | 3) DTV : 07 ~ 69 | | | |
| | | 4) CATV : 01 ~ 135 | | | |
| 3 | Input Voltage | 1) AC 100 - 240V~ 50/60Hz | | | |
| 4 | Market | Central and South AMERICA | | | |
| 5 | Screen Size | 19 inch Wide (1366 x 768) | | | 19LV2500 |
| | | 22 inch Wide (1366 x 768) | | | 22LV2500 |
| | | 26 inch Wide (1366 x 768) | | | 26LV2500 |
| | | 32 inch Wide (1366 x 768) | | | 32LV2500 |
| | | 32 inch Wide (1920 x 1080) | | | 32LV3500, 32LV3400, 32LK450, 32LK43 |
| | | 37 inch Wide (1920 x 1080) | | | 37LV3500 |
| | | 42 inch Wide (1920 x 1080) | | | 42LV3500, 42LV3400 42LK450 |
| | | 47 inch Wide (1920 x 1080) | | | 47LV3500 |
| 6 | Aspect Ratio | 16:9 | | | |
| 7 | Tuning System | FS | | | |
| 8 | LCD Module | T260XW04-V9 | HD, 60Hz | AUO | 26LK330 |
| | | T315XW03-VF | HD, 60Hz | AUO | 32LK330 |
| | | LC320WXN-SCA2 | , | LGD | |
| | | LC320WXE-SCA1 | | LGD | |
| | | VVX32H109G00 | | IPS | |
| | | T315HW04-V9 | FHD, 60Hz | AUO | 32LK430 |
| | | T315HW04-V9 | FHD, 60Hz | AUO | 32LK450 |
| | | LC320WUN-SDA1 | , , , , , , , , | LGD | |
| | | LC320WUE-SCA1 | | LGD | |
| | | T315XW06-V3 | HD, 60Hz | AUO | 32LV2500 |
| | | LC320EXN-SDA1 | , | LGD | 52112333 |
| | | VVX32H110G00 | | IPS | |
| | | LC320EUN-SDV2 | FHD, 60Hz | LGD | 32LV3400 |
| | | V315H3-LE7 | FHD, 60Hz | CMI | 32LV3500 |
| | | T315HW07-V8 | , | AUO | 521.5555 |
| | | LC320EUN-SDV2 | | LGD | |
| | | LC370WUE-SCA1 | FHD, 60Hz | LGD | 37LK450 |
| | | T370HW05-V1 | FHD, 60Hz | AUO | 37LV3500 |
| | | LC370EUN-SDV2 | 1112, 00112 | LGD | 0.170000 |
| | | T420HW09-V0 | FHD, 60Hz | AUO | 42LK450 |
| | | LC420WUE-SCA2 | 1112, 00112 | LGD | 42211400 |
| | | LC420EUN-SDV3 | FHD, 60Hz | LGD | 42LV3400, 42LV3500 |
| | | T420HW08-V1 | FHD, 60Hz | AUO | 42LV3500 |
| | | LC470WUE-SCA2 | FHD, 60Hz | LGD | 47LK450 |
| | | LC470EUE-SDV1 | FHD, 60Hz | LGD | 47LV3500 |
| | | M185XW01-VD | HD, 60Hz | AUO | 19LV2500 |
| | | M215HGE-L10 | FHD, 60Hz | CMI | 22LV2500 |
| | | M215HW01-VB | 1110,00112 | AUO | 222 72000 |
| | | | UD 60U-7 | | 261 1/2500 |
| | | T260XW06-V3 | HD, 60Hz | AUO | 26LV2500 |
| | Operation Francisco | LC260EXN-SDA1 | | LGD | |
| 9 | Operating Environment | Temp: 0 ~ 40 deg | | | |
| 40 | Otana na Francisco de d | Humidity: ~ 80 % | | | |
| 10 | Storage Environment | Temp: -20 ~ 60 deg | | | |
| | | Humidity: -85 % | | | |

5. Chrominance & Luminance (32LV3500-SG, 32LV3400-SG)

| Max Luminance | |
|--|-----------------------|
| Full White Pattern) 360 450 CMI SET 250 320 cd/m² LGD 280 360 AUO 310 400 CMI 2 Luminance uniformity 1.3 3 Color coordinate RED X Typ. 0.637 Typ. LGD -0.03 0.635 CMI Y 0.341 LGD CMI CMI | |
| SET 250 320 cd/m² LGD | |
| 280 360 AUO | |
| 310 400 CMI | |
| 2 Luminance uniformity 1.3 3 Color coordinate RED X Typ. 0.637 Typ. 1.00 LGD -0.03 0.630 0.630 0.635 CMI +0.03 CMI LGD Y 0.341 CMI LGD | |
| 3 Color coordinate RED X Typ. 0.637 Typ. LGD -0.03 0.630 +0.03 AUO Y 0.341 LGD | |
| -0.03 | |
| 0.635 CMI Y 0.341 LGD | |
| Y 0.341 LGD | |
| | |
| 0.330 AUO | |
| | |
| 0.323 CMI | |
| GREEN X 0.320 LGD | |
| 0.320 AUO | |
| 0.288 CMI | |
| Y 0.606 LGD | |
| 0.620 AUO | |
| 0.600 CMI | |
| BLUE X 0.152 LGD | |
| 0.150 AUO | |
| 0.148 CMI | |
| Y 0.055 LGD | |
| 0.040 AUO | |
| 0.050 CMI | |
| WHITE X 0.279 LGD | |
| 0.280 AUO | |
| 0.280 CMI | |
| Y 0.292 LGD | |
| 0.290 AUO | |
| 0.290 CMI | |
| 3. Contrast ratio 1000 1400 LGD | |
| 3200 4000 AUO | |
| 3500 5000 CMI | |
| 4. Color Temperature Cool 0.254 0.269 0.284 <test condition<="" td=""><td></td></test> | |
| | erance is ± 0.015 for |
| Standard 0.270 0.285 0.300 Adjustment | |
| 0.278 0.293 0.308 | |
| Warm 0.298 0.313 0.324 | |
| 0.314 0.329 0.344 | |

6. Component Video Input (Y, CB/PB, CR/PR)

| No | Resolution | H-freq(kHz) | V-freq.(kHz) | Pixel clock | Proposed |
|-----|------------|-------------|--------------|-------------|----------------|
| 1. | 720*576 | 15.625 | 50.000 | 13.5 | SDTV 576I |
| 2. | 720*480 | 15.73 | 60 | 13.5135 | SDTV ,DVD 480I |
| 3. | 720*480 | 15.73 | 59.94 | 13.5 | SDTV ,DVD 480I |
| 4. | 720*480 | 31.50 | 60 | 27.027 | SDTV 480P |
| 5. | 720*480 | 31.47 | 59.94 | 27.0 | SDTV 480P |
| 6. | 720*576 | 31.250 | 50.000 | 27.000 | SDTV 576P |
| 7. | 1280*720 | 37.500 | 50.000 | 74.25 | HDTV 720P |
| 8. | 1280*720 | 45.00 | 60.00 | 74.25 | HDTV 720P |
| 9. | 1280*720 | 44.96 | 59.94 | 74.176 | HDTV 720P |
| 10. | 1920*1080 | 28.125 | 50.00 | 74.250 | HDTV 1080I |
| 11. | 1920*1080 | 33.75 | 60.00 | 74.25 | HDTV 1080I |
| 12. | 1920*1080 | 33.72 | 59.94 | 74.176 | HDTV 1080I |
| 13. | 1920*1080 | 56.250 | 50.00 | 148.50 | HDTV 1080P |
| 14. | 1920*1080 | 67.500 | 60 | 148.50 | HDTV 1080P |
| 15. | 1920*1080 | 67.432 | 59.94 | 148.352 | HDTV 1080P |
| 16. | 1920*1080 | 27.000 | 24.000 | 74.25 | HDTV 1080P |
| 17. | 1920*1080 | 26.97 | 23.976 | 74.176 | HDTV 1080P |
| 18. | 1920*1080 | 33.75 | 30.000 | 74.25 | HDTV 1080P |
| 19. | 1920*1080 | 33.71 | 29.97 | 74.176 | HDTV 1080P |

7. RGB Input (PC)

| No | Resolution | H-freq(kHz) | V-freq.(kHz) Pixel clock | | Proposed | | |
|----|------------|-------------|--------------------------|--------|----------|------------|---|
| | PC | | | | | DDC | |
| 1. | 640*350 | 31.468 | 70.09 | 25.17 | | EGA | X |
| 2. | 720*400 | 31.469 | 70.08 | 28.32 | | DOS | 0 |
| 3. | 640*480 | 31.469 | 59.94 | 25.17 | | VESA(VGA) | 0 |
| 4. | 800*600 | 37.879 | 60.31 | 40.00 | | VESA(SVGA) | 0 |
| 5. | 1024*768 | 48.363 | 60.00 | 65.00 | | VESA(XGA) | 0 |
| 6. | 1280*768 | 47.78 | 59.870 | 79.5 | | CVT(WXGA) | 0 |
| 7. | 1360*768 | 47.712 | 60.015 | 85.50 | | VESA(WXGA) | 0 |
| 8. | 1280*1024 | 63.981 | 60.020 | 108.00 | | VESA(SXGA) | 0 |
| 9. | 1920*1080 | 67.5 | 60 | 148.5 | | HDTV 1080P | 0 |

•RGB PC Monitor Range Limits Min Vertical Freq - 58 Hz Max Vertical Freq - 62 Hz Min Horiz. Freq - 30 kHz Max Horiz. Freq - 83 kHz Pixel Clock - 160 MHz

8. HDMI input (PC/DTV)

| No | Resolution | H-freq(kHz) | V-freq.(kHz) | Pixel clock | Proposed | |
|----|------------|-------------|--------------|-------------|-------------|---|
| | PC | | | | DDC | |
| 1. | 640*350 | 31.468 | 70.09 | 25.17 | EGA | Х |
| 2. | 720*400 | 31.469 | 70.08 | 28.32 | DOS | 0 |
| 3. | 640*480 | 31.469 | 59.94 | 25.17 | VESA(VGA) | 0 |
| 4. | 800*600 | 37.879 | 60.31 | 40.00 | VESA(SVGA) | 0 |
| 5. | 1024*768 | 48.363 | 60.00 | 65.00 | VESA(XGA) | 0 |
| 6. | 1360*768 | 47.712 | 60.015 | 85.50 | VESA (WXGA) | 0 |
| 7. | 1280*1024 | 63.981 | 60.020 | 108.00 | VESA (SXGA) | 0 |
| 8. | 1920*1080 | 67.500 | 60.000 | 148.50 | HDTV 1080P | 0 |
| | DTV | | | | | |
| 1 | 720*480 | 31.469 | 59.940 | 27.000 | SDTV 480P | |
| 2 | 720*480 | 31.500 | 60 | 27.027 | SDTV 480P | |
| 3 | 720*576 | 31.250 | 50.000 | 27.000 | SDTV 576P | |
| 4 | 1280*720 | 37.500 | 50.000 | 74.25 | HDTV 720P | |
| 5 | 1280*720 | 45.00 | 60.00 | 74.25 | HDTV 720P | |
| 6 | 1280*720 | 44.96 | 59.94 | 74.176 | HDTV 720P | |
| 7 | 1920*1080 | 28.125 | 50.000 | 74.25 | HDTV 1080I | |
| 8 | 1920*1080 | 33.75 | 60.00 | 74.25 | HDTV 1080I | |
| 9 | 1920*1080 | 33.72 | 59.94 | 74.176 | HDTV 1080I | |
| 10 | 1920*1080 | 56.250 | 50.000 | 148.50 | HDTV 1080P | |
| 11 | 1920*1080 | 67.500 | 60 | 148.50 | HDTV 1080P | |
| 12 | 1920*1080 | 67.432 | 59.94 | 148.352 | HDTV 1080P | |
| 13 | 1920*1080 | 27.000 | 24.000 | 74.25 | HDTV 1080P | |
| 14 | 1920*1080 | 26.97 | 23.976 | 74.176 | HDTV 1080P | |
| 15 | 1920*1080 | 33.75 | 30.000 | 74.25 | HDTV 1080P | |
| 16 | 1920*1080 | 33.71 | 29.97 | 74.176 | HDTV 1080P | |

•HDMI Monitor Range Limits Min Vertical Freq - 58 Hz Min Horiz. Freq - 30 kHz Pixel Clock - 160 MHz

Max Vertical Freq - 62 Hz Max Horiz. Freq - 83 kHz

ADJUSTMENT INSTRUCTION

1. Application Range

This specification sheet is applied to all of the LCD TV with LJ01M/LJ01P/LJ01R chassis.

2. Designation

- The adjustment is according to the order which is designated and which must be followed, according to the plan which can be changed only on agreeing.
- 2) Power Adjustment: Free Voltage
- 3) Magnetic Field Condition: Nil.
- 4) Input signal Unit: Product Specification Standard
- 5) Reserve after operation: Above 5 Minutes (Heat Run) Temperature : at 25 °C ± 5 °C

Relative humidity: 65 % ± 10 % Input voltage: 100 ~ 220 V~, 50/60 Hz

- Adjustment equipments: Color Analyzer(CA-210 or CA-110), DDC Adjustment Jig equipment, Service remote control.
- 7) Push the "IN STOP" key For memory initialization.

Case1: Software version up

- After downloading S/W by USB, TV set will reboot automatically
- 2. Push "In-stop" key
- 3. Push "Power on" key
- 4. Function inspection
- 5. After function inspection, Push "In-stop" key.

Case2: Function check at the assembly line


- 1. When TV set is entering on the assembly line, Push "In-stop" key at first.
- 2. Push "Power on" key for turning it on.
 - -> If you push "Power on" key, TV set will recover channel information by itself.
- 3. After function inspection, Push "In-stop" key.

3. Main PCB check process


* APC - After Manual-Insult, executing APC

* Boot file Download


1) Execute ISP program "Mstar ISP Utility" and then click "Config" tab.

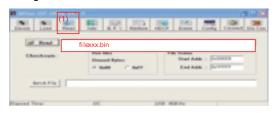

- Set as below, and then click "Auto Detect" and check "OK" message
 - If "Error" is displayed, Check connection between computer, jig, and set.
- Click "Read" tab, and then load download file (XXXX.bin) by clicking "Read"
- 4) Click "Connect" tab. If "Can't" is displayed, check connection between computer, jig, and set.

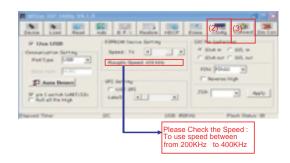


- 5) Click "Auto" tab and set as below
- 6) Click "Run".
- 7) After downloading, check "OK" message.

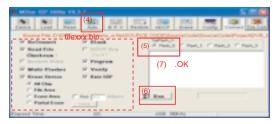

* USB DOWNLOAD

- 1) Put the USB Stick to the USB socket
- 2) Automatically detecting update file in USB Stick
 - If your downloaded program version in USB Stick is Low, it didn't work. But your downloaded version is High, USB data is automatically detecting
- 3) Show the message "Copying files from memory"

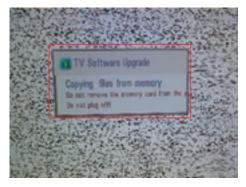

4) Updating is staring





- 5) Uploading completed, The TV will restart automatically.
- 6) If your TV is turned on, check your updated version and Tool option.(explain the Tool option, next stage)
 - * If downloading version is more high than your TV have, TV can lost all channel data. In this case, you have to channel recover. if all channel data is cleared, you didn't have a DTV/ATV test on production line.

* After downloading, have to adjust Tool Option again.

- 1) Push "IN-START" key in service remote control.
- 2) Select "Tool Option 1" and Push "OK" button.
- 3) Punch in the number. (Each model has their number)
- 4) Completed selecting Tool option.

| Modu le | Module | Too I option1 | Too I option2 | Too I option3 | Too I option4 | Too I option5 |
|-------------|---------------|---------------|---------------|---------------|---------------|---------------|
| 42LV4500-SA | LGD | 26496 | 19478 | 55337 | 10520 | 8448 |
| 32LV4500-SA | LGD | 18304 | 19478 | 55337 | 10520 | 8480 |
| 55LV3500-SA | LGD | 46944 | 19478 | 55337 | 10520 | 8448 |
| 47LV3500-SA | LGD | 34656 | 19478 | 55337 | 10520 | 256 |
| 42LV3500-SA | AUO | 26472 | 19478 | 55337 | 10520 | 352 |
| 42LV3500-SA | LGD | 26464 | 19478 | 55337 | 10520 | 288 |
| 37LV3500-SA | AUO | 22376 | 19478 | 55337 | 10520 | 352 |
| 37LV3500-SA | LGD | 22368 | 19478 | 55337 | 10520 | 288 |
| 32LV3500-SA | CMI | 18276 | 19478 | 55337 | 10520 | 352 |
| 32LV3500-SA | AUO | 18280 | 19478 | 55337 | 10520 | 352 |
| 32LV3500-SA | LGD | 18272 | 19478 | 55337 | 10520 | 288 |
| 42LV3400-SA | LGD | 26592 | 9226 | 53289 | 10520 | 288 |
| 32LV3400-SA | LGD | 18400 | 9226 | 53289 | 10520 | 288 |
| 32LV2500-SA | CMI | 18212 | 19478 | 55337 | 10520 | 352 |
| 32LV2500-SA | AUO | 18216 | 19478 | 55337 | 10520 | 352 |
| 32LV2500-SA | LGD | 18208 | 19478 | 55337 | 10520 | 288 |
| 26LV2500-SA | AUO | 14120 | 8714 | 55337 | 10520 | 288 |
| 26LV2500-SA | LGD | 14112 | 8714 | 55337 | 10520 | 288 |
| 22LV2500-SA | CMI | 10020 | 8714 | 55337 | 10520 | 288 |
| 22LV2500-SA | AUO | 10024 | 8714 | 55337 | 10520 | 288 |
| 19LV2500-SA | AUO | 5928 | 8714 | 55337 | 10520 | 288 |
| 19LV2500-SA | CMI | 5924 | 8714 | 55337 | 10520 | 288 |
| 19LV2500-SA | LGD | 5920 | 8714 | 55337 | 10520 | 288 |
| 47LK450-SA | LGD | 34432 | 18966 | 55305 | 10520 | 8450 |
| 42LK450-SA | LGD | 26240 | 18966 | 55305 | 10520 | 8450 |
| 42LK450-SA | AUO | 26248 | 18966 | 55305 | 10520 | 290 |
| 37LK450-SA | LGD | 22144 | 18966 | 55305 | 10520 | 8450 |
| 37LK450-SA | AUO | 22152 | 18966 | 55305 | 10520 | 290 |
| 32LK450-SA | AUO | 18056 | 18966 | 55305 | 10520 | 290 |
| 32LK450-SA | LGD | 18048 | 18966 | 55305 | 10520 | 8482 |
| 32LK450-SA | LGD (CoMS) | 18048 | 18966 | 55305 | 10520 | 8450 |
| 32LK430-SA | AUO | 18024 | 18966 | 51209 | 10520 | 290 |
| 32LK330-SB | AUO | 17992 | 18966 | 51209 | 10520 | 290 |
| 32LK330-SB | LGD | 17984 | 18966 | 51209 | 10520 | 290 |
| 32LK330-SB | LGD (CoMS) | 17984 | 18966 | 51209 | 10520 | 258 |
| 26LK330-SB | AUO | 13896 | 18966 | 51209 | 10520 | 290 |

3.1. ADC Process

- (1) ADC
 - Enter Service Mode by pushing "ADJ" key,
 - Enter Internal ADC mode by pushing " $_{\rm G}$ " key at "6. ADC Calibration"



<Caution> Using 'power on' button of the Adjustment R/C, power on TV.

* ADC Calibration Protocol (RS232)

| No | Item | CMD1 | CMD2 | Da | ta0 | |
|--------------|------------|------|------|----|-----|---------------------------------|
| Enter Adjust | Adjust | Α | Α | 0 | 0 | When transfer the 'Mode In', |
| Mode | 'Mode In' | | | | | Carry the command. |
| ADC adjust | ADC Adjust | Α | D | 1 | 0 | Automatically adjustment |
| | | | | | | (The use of a internal pattern) |

Adjust Sequence

- aa 00 00 [Enter Adjust Mode]
- xb 00 40 [Component1 Input (480i)]
- ad 00 10 [Adjust 480i Comp1]
- xb 00 60 [RGB Input (1024*768)]
- ad 00 10 [Adjust 1024*768 RGB]
- aa 00 90 End Adjust mode
- * Required equipment : Adjustment R/C.

3.2. Function Check

- * Check display and sound
- Check Input and Signal items. (cf. work instructions)
 - 1) TV
 - 2) AV (SCART1/SCART2/ CVBS)
 - 3) COMPONENT (480i)
 - 4) RGB (PC: 1024 x 768 @ 60hz)
 - 5) HDMI
 - 6) PC Audio In
 - * Display and Sound check is executed by Remote control.

4. Total Assembly line process

4.1. Adjustment Preparation

· W/B Equipment condition


CA210: CH 9. Test signal: Inner pattern (85IRE)

· Above 5 minutes H/run in the inner pattern. ("power on" key of adjust remote control)

| Cool | 13,000 | K | X=0.269(±0.002) | |
|--------|--------|---|-----------------|-------------------------|
| | | | Y=0.273(±0.002) | <test signal=""></test> |
| Medium | 9,300 | K | X=0.285(±0.002) | Inner pattern |
| | | | Y=0.293(±0.002) | (216gray,85IRE) |
| Warm | 6,500 | K | X=0.313(±0.002) | |
| | | | Y=0.329(±0.002) | |

* Connecting picture of the measuring instrument (On Automatic control)

Inside PATTERN is used when W/B is controlled. Connect to auto controller or push Adjustment R/C POWER ON -> Enter the mode of White-Balance, the pattern will come out.

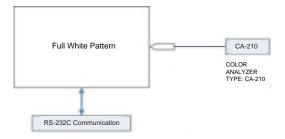

- * Auto-control interface and directions
- 1) Adjust in the place where the influx of light like floodlight around is blocked. (illumination is less than 10 lux).
- 2) Adhere closely the Color Analyzer (CA210) to the module less than 10 cm distance, keep it with the surface of the Module and Color Analyzer's prove vertically.(80° ~ 100°).
- 3) Aging time
 - After aging start, keep the power on (no suspension of power supply) and heat-run over 5 minutes.
 - Using 'no signal' or 'full white pattern' or the others, check the back light on.
- Auto adjustment Map(RS-232C) RS-232C COMMAND

[CMD ID DATA]

Wb 00 00

White Balance Start White Balance End Wb 00

| | RS-232 | MIN | CENTER | | | MAX | | |
|--------|--------|---------|--------|--------|-----------|-----------|------|----------|
| | | MD ID E | | 101111 | (DEFAULT) | | | 1017 0 (|
| | _ • | | | | , | (DEFAULT) | | |
| | Cool | Mid | Warm | | Cool | Mid | Warm | |
| R Gain | jg | Ja | jd | 00 | 172 | 192 | 192 | 192 |
| G Gain | jh | Jb | je | 00 | 172 | 192 | 192 | 192 |
| B Gain | ji | Jc | jf | 00 | 192 | 192 | 172 | 192 |
| R Cut | | | | | 64 | 64 | 64 | 128 |
| G Cut | | | | | 64 | 64 | 64 | 128 |
| B Cut | | | | | 64 | 64 | 64 | 128 |

<Caution>


Color Temperature: COOL, Medium, Warm.

One of R Gain/G Gain/ B Gain should be kept on 0xC0, and adjust other two lower than C0.

(when R/G/B Gain are all C0, it is the FULL Dynamic Range of Module)

- * Manual W/B process using adjusts Remote control.
- After enter Service Mode by pushing "ADJ" key,
- Enter White Balance by pushing "G" key at "6. White Balance".



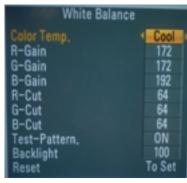

- * After done all adjustments, Press "In-start" button and compare Tool option and Area option value with its BOM, if it is correctly same then unplug the AC cable. If it is not same, then correct it same with BOM and unplug AC cable. For correct it to the model's module from factory Jig model.
- * Push the "IN STOP" key after completing the function inspection. And Mechanical Power Switch must be set "ON".

4.2. DDC EDID Write (RGB 128Byte)

- Connect D-sub Signal Cable to D-sub Jack.
- Write EDID Data to EEPROM(24C02) by using DDC2B protocol.
- Check whether written EDID data is correct or not.
- * For SVC main Assembly, EDID have to be downloaded to Insert Process in advance.

4.3. DDC EDID Write (HDMI 256Byte)

- Connect HDMI Signal Cable to HDMI Jack.
- Write EDID Data to EEPROM(24C02) by using DDC2B protocol.
- Check whether written EDID data is correct or not.
- * For SVC main Assembly, EDID have to be downloaded to Insert Process in advance.

4.4. EDID DATA

1) All Data: HEXA Value

2) Changeable Data:

*: Serial No : Controlled / Data:01

**: Month: Controlled / Data:00

:Year : Controlled *:Check sum

4.5. Auto Download

- 1) Press Adj. key on the Adj. Remote control.
- 2) Select EDID D/L menu.
- 3) By pressing Enter key, EDID download will begin
- If Download is successful, OK is display, but If Download if failure, NG is displayed.
- 5) If Download is failure, Re-try downloads.





* Edid data and Model option download (RS232)

| NO | Item | CMD1 | CMD2 | D | ata0 | |
|-----------------|-----------|------|------|----|------|---------------------------------|
| Enter | Download | Α | Α | 0 | 0 | When transfer the 'Mode In', |
| download Mode | 'Mode In' | | | | | Carry the command. |
| EDID data | Download | Α | Е | 00 | 10 | Automatically Download |
| and Model | | | | | | (The use of a internal pattern) |
| option download | | | | | | |

- Manual Download

- * Caution
- 1) Use the proper signal cable for EDID Download
 - Analog EDID : Pin3 exists
 - Digital EDID : Pin3 exists
- 2) Never connect HDMI & D-sub Cable at the same time.
- 3) Use the proper cables below for EDID Writing
- Download HDMI1, HDMI2, separately because HDMI1 is different from HDMI2

| For Analog EDID | For HDMI EDID | | | | |
|-----------------|-------------------------------|--|--|--|--|
| D-sub to D-sub | DVI-D to HDMI or HDMI to HDMI | | | | |
| | P | | | | |

| Item | Condition | Data(Hex) |
|-----------------|-------------|-----------|
| Manufacturer ID | GSM | 1E6D |
| Version | Digital : 1 | 01 |
| Revision | Digital : 3 | 03 |

1) FHD RGB EDID data(Check sum:ED)


0x00 00 FF FF FF FF FF FF 00 1E 6D 01 00 01 01 01 01 01 0x10 01 15 01 03 68 10 09 78 0A EE 91 A3 54 4C 99 26 0x20 0F 50 54 A1 08 00 81 80 61 40 45 40 31 40 01 01 0x30 01 01 01 01 01 01 02 3A 80 18 71 38 2D 40 58 2C 0x40 45 00 A0 5A 00 00 00 1E 66 21 50 B0 51 00 1B 30 0x50 40 70 36 00 A0 5A 00 00 00 1E 00 00 00 FD 00 3A 0x60 3E 1E 53 10 00 0A 20 20 20 20 20 20 00 00 0F C 0x70 00 4C 47 20 54 56 0A 20 20 20 20 20 20 20 20 00 ED

2) FHD HDMI EDID data HDMI 1 (Check sum:E2, 99)


HDMI 2 (Check sum:E2, 89)

HDMI 3 (Check sum:B4, 45)


3) HD RGB EDID data(Check sum:CD)

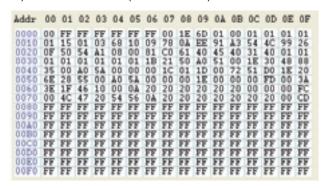

4) HD HDMI EDID data HDMI 1 (Check sum:B4, 65)

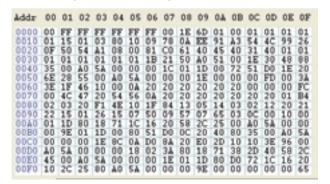

HDMI 2 (Check sum:B4, 55)

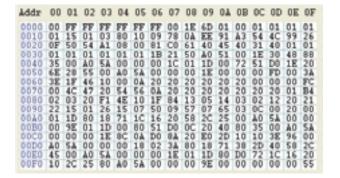

HDMI 3 (Check sum:B4, 45)

| Addr | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 07 | 0B | 0C | 0D | 0E | 0F |
|------|-----|-----|----|-----|-----|----|-----|----|-----|-----|----|-----|-----|----|-----|-----------|
| 0000 | 00 | FF | FF | FF | FF | FF | FF | 00 | 1E | 6D | 01 | 00 | 01 | 01 | 01 | 01 |
| 0010 | 01 | 15 | 01 | 03 | 80 | 10 | 09 | 78 | 0A | EE | 91 | A3 | 54 | 4C | 99 | 26 |
| 0020 | 0F | 50 | 54 | A1 | 08 | 00 | 81 | CO | 61 | 4.0 | 45 | 40 | 31 | 40 | 01 | 01 |
| 0030 | 01 | 01 | 01 | 01 | 01 | 01 | 18 | 21 | 50 | 70 | 51 | 00 | 1E | 30 | 48 | 0.0 |
| 0040 | 35 | 00 | 70 | 27 | 00 | 00 | 00 | 10 | 01 | 1D | 00 | 72 | 51 | DO | 1E | 20 |
| 0050 | 6E | 28 | 55 | 0.0 | A0 | 5A | 0.0 | 00 | 00 | 1E | 00 | 0.0 | 0.0 | FD | 0.0 | 34 |
| 0060 | 3E | 1F | 46 | 10 | 00 | OA | | 20 | 20 | 20 | 20 | 20 | 0.0 | 00 | 0.0 | FC |
| 0070 | 0.0 | 4C | 47 | 20 | 54 | 56 | 0A | 20 | 20 | 20 | 20 | 20 | 20 | 20 | 01 | B4 |
| 0080 | 02 | 03 | 20 | F1 | 4E | | | 04 | | | 14 | 03 | 02 | 12 | 20 | 21 |
| 0090 | 22 | 15 | 01 | 26 | 15 | 07 | \$0 | 09 | 57 | 07 | 65 | 03 | 0C | 00 | 30 | 0.0 |
| 0040 | 01 | 1D | 80 | 1.0 | 71 | | | | 58 | | | 00 | 70 | | 0.0 | 0.0 |
| 00B0 | 00 | 9E | 01 | 1D | 00 | 80 | 51 | DO | 0C | | 40 | 80 | 35 | 00 | A0 | 54 |
| 00C0 | 0.0 | 0.0 | 00 | 1E | 8C | OA | D0 | 87 | | E0 | 2D | 10 | 10 | 3E | 96 | 0.0 |
| ODDO | W0 | 54 | 00 | 0.0 | 0.0 | | | 37 | | 18 | 71 | | 2D | 40 | 58 | 2C |
| 00E0 | 45 | 00 | Y0 | SA. | | | | 1E | | 1D | 80 | DO | | 1C | | 20 |
| OOFO | 10 | 2C | 25 | 80 | A0 | 5A | 00 | 00 | 0.0 | 9Ε | 00 | 0.0 | 00 | 00 | 0.0 | 45 |

- Model List

| HD(CCFL) | FHD(CCFL) | HD(LED) | FHD Small(LED) | FHD(LED) |
|------------|------------|-------------|----------------|-------------|
| 26LK330-SH | 32LK450-SG | 19LV2500-SG | | 37LV3500-SG |
| 32LK330-SH | 37LK450-SG | 22LV2500-SG | | 42LV3500-SG |
| | 42LK450-SG | 26LV2500-SG | | 47LV3500-SG |
| | 47LK450-SG | 32LV2500-SG | | 55LV3500-SG |
| | 32LK430-SG | | | |
| | | | | |
| | | | | |

4.5. Outgoing condition Configuration

 When pressing IN-STOP key by SVC remocon, Red LED are blinked alternatively. And then Automatically turn off. (Must not AC power OFF during blinking)


4.6. Hi-pot Test


Confirm whether is normal or not when between power board's ac block and GND is impacted on 1.5 kV/min at 100mA(GND) and 3kV/min at 100mA(Signal)


EXPLODED VIEW


IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by $\hat{\mathbb{M}}$ in the Schematic Diagram and EXPLODED VIEW. It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards. Do not modify the original design without permission of manufacturer.

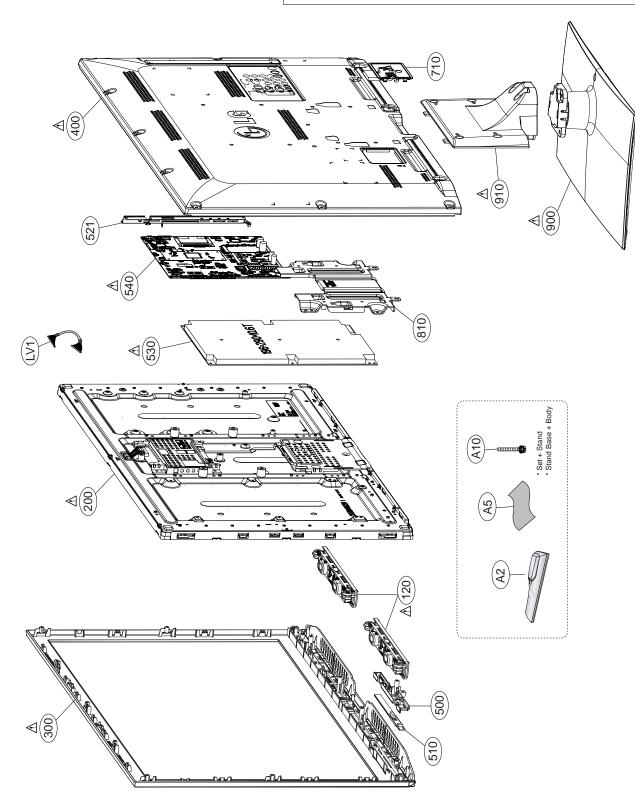

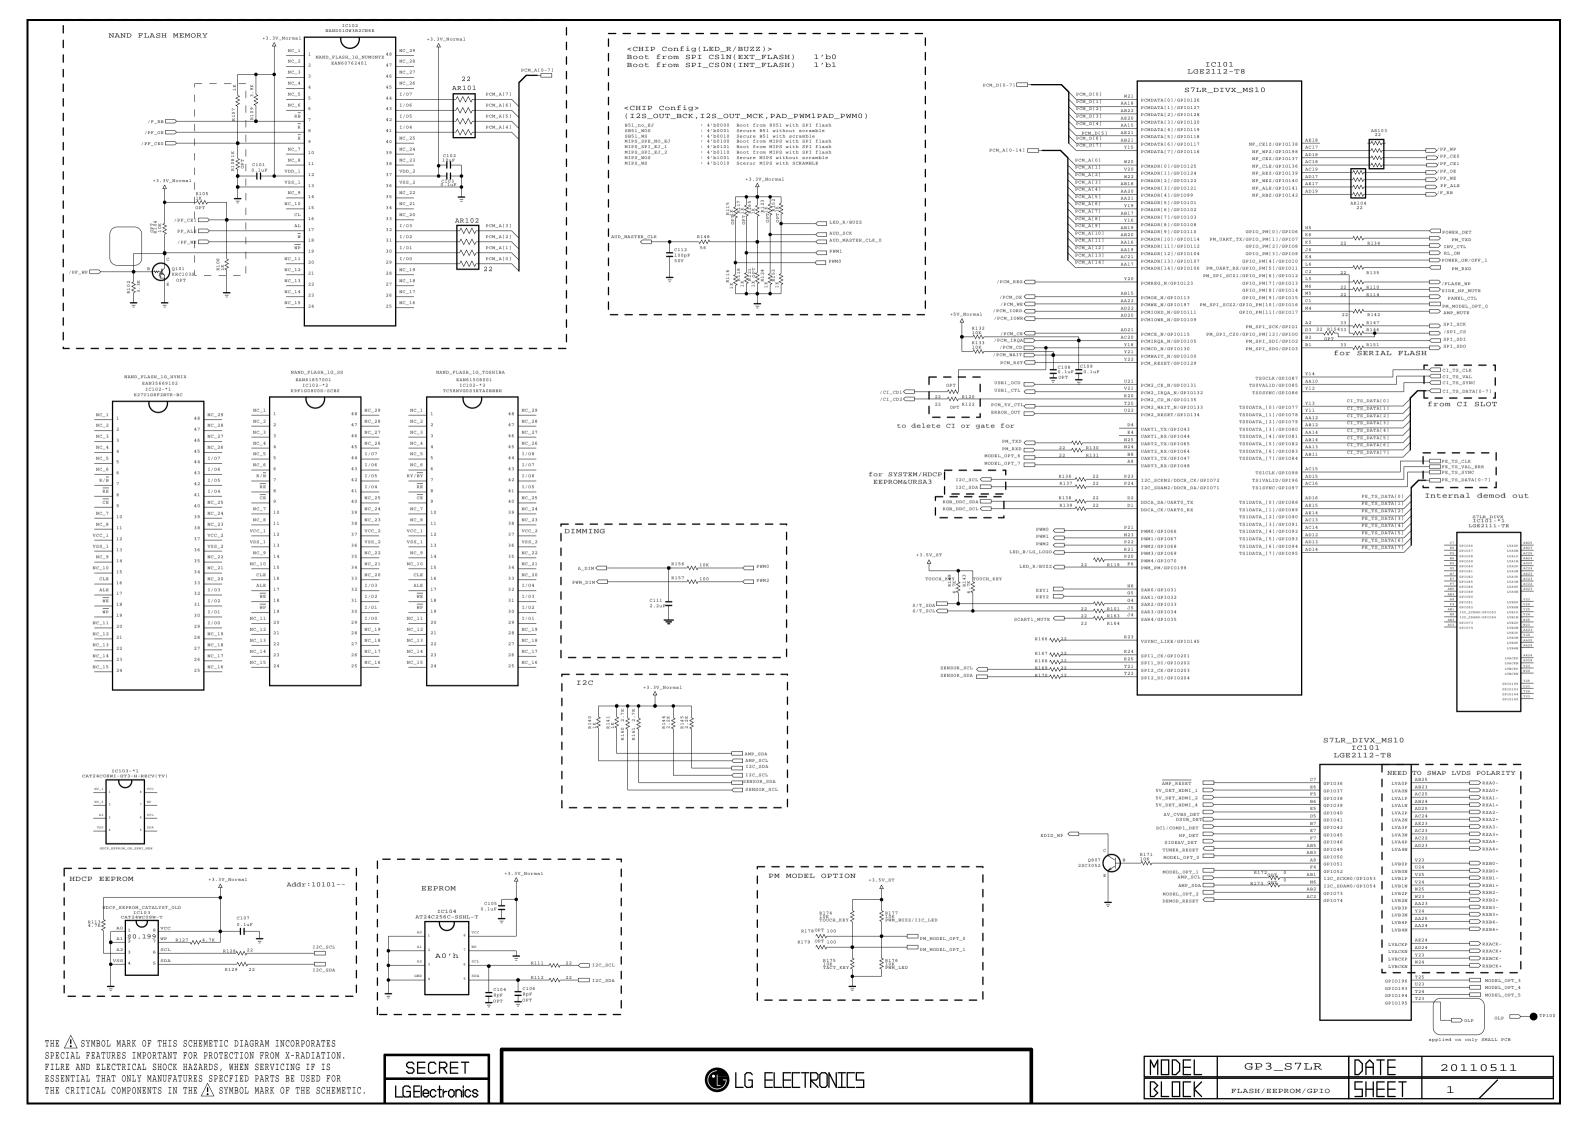

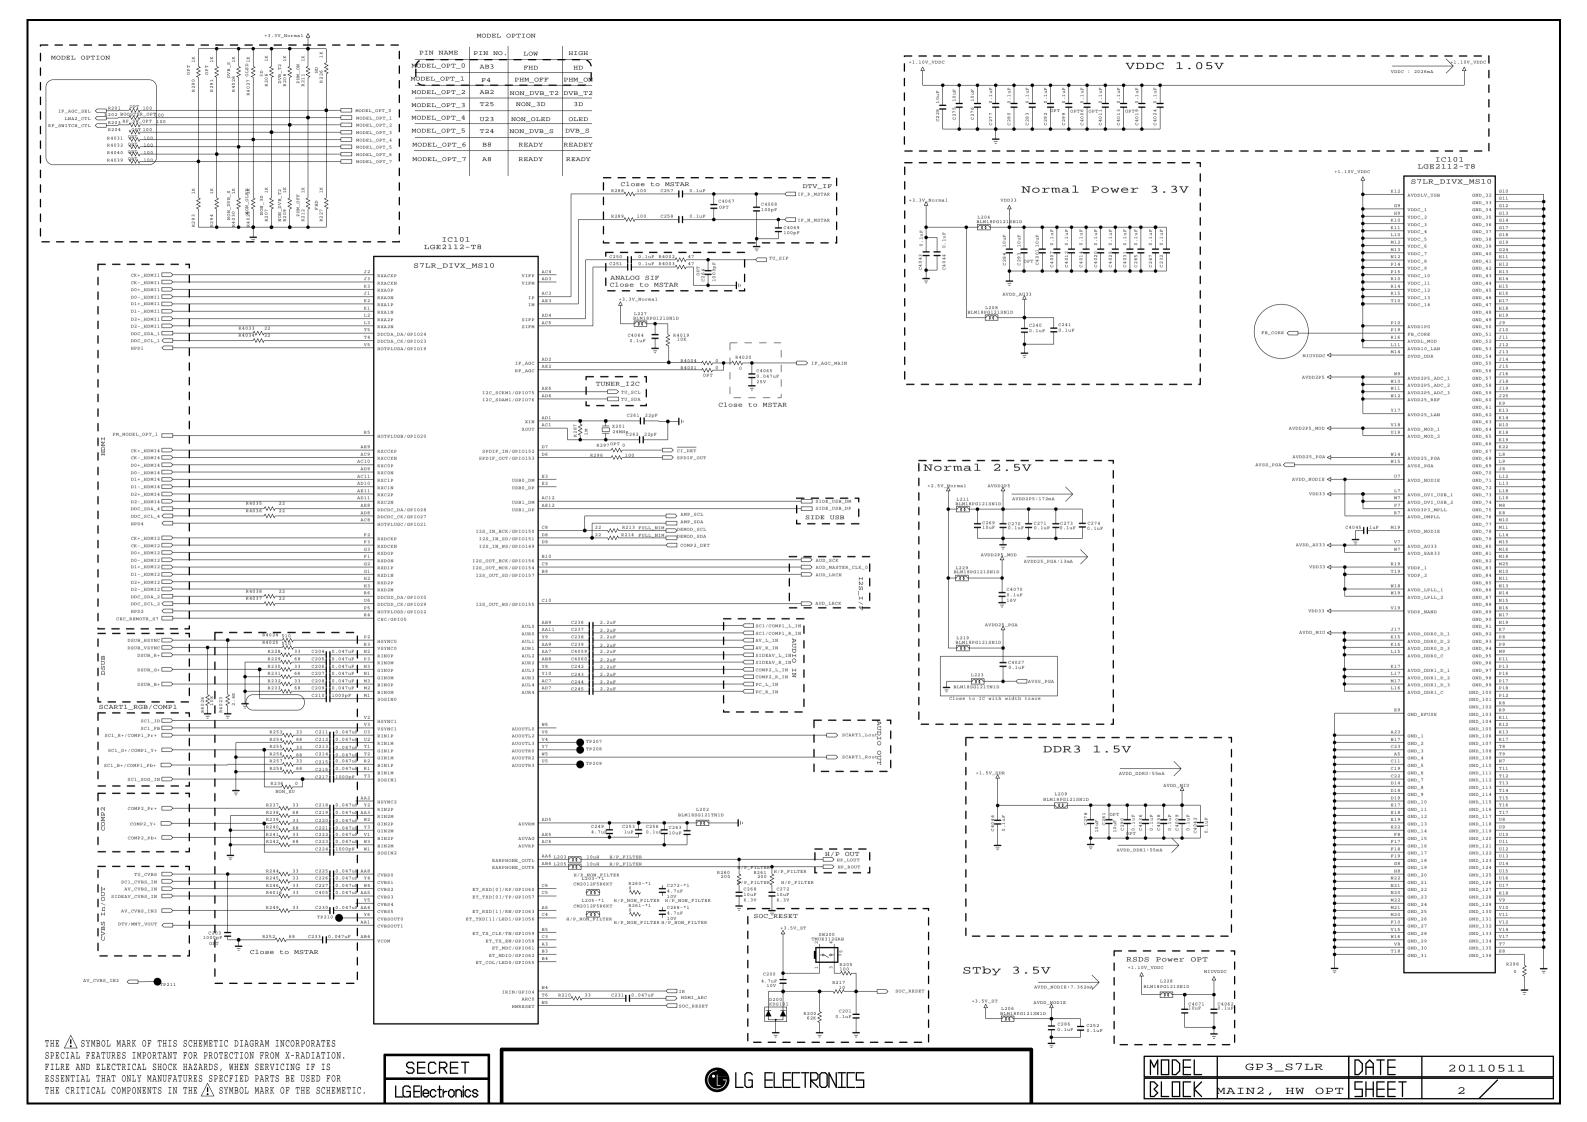


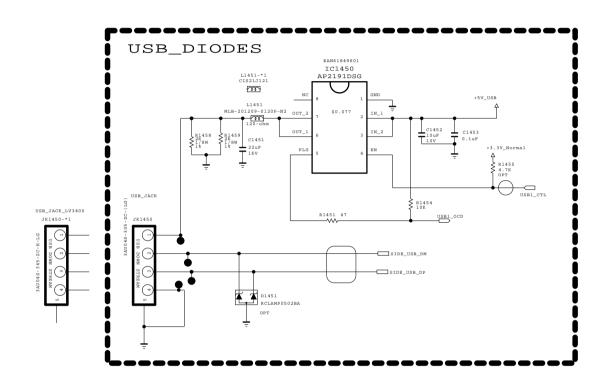



| MODEL | GP2R | DATE | 20101023 |
|---------|---------------|-------|----------|
| BLOCK 1 | JSB_OCP_DIODE | SHEET | 7 |

D1-_HDMI4 For CEC — □ D1+_HDMI4 D2-_HDMI4 THE A SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. DATE FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS SECRET GP3_S7LR G LG ELECTRONICS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ASSUMBLY MARK OF THE SCHEMETIC. SHEE LGElectronics HDMI

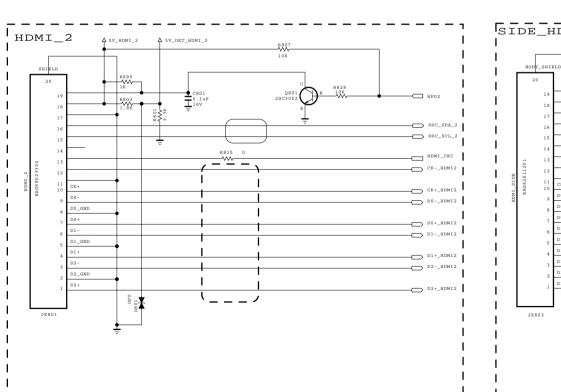



DDC_SCL_1 HDMI_ARC

CK+_HDMI1 DO-_HDMI1

D1-_HDMI1


HDMI_1

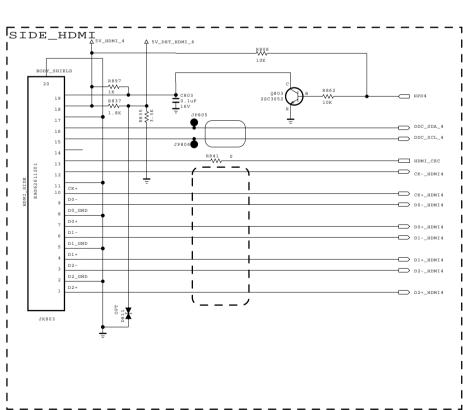


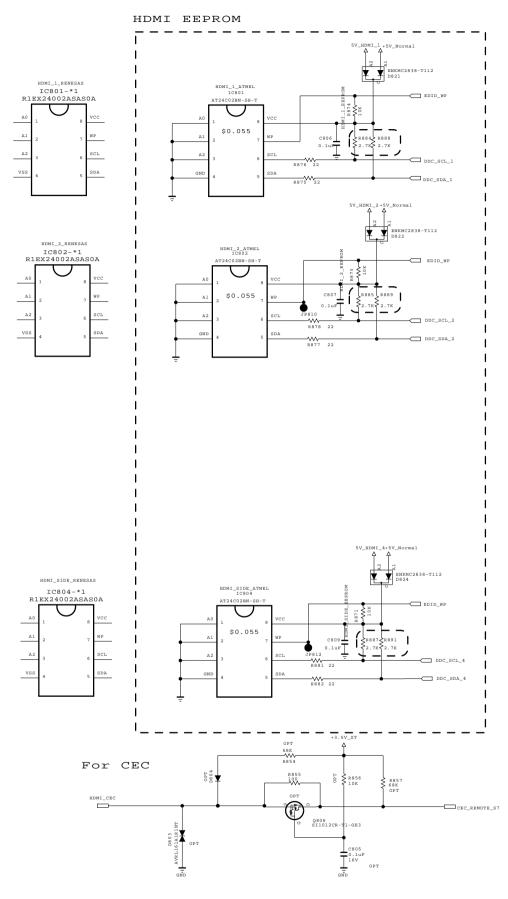





RGB/SPDIF/PC/HP

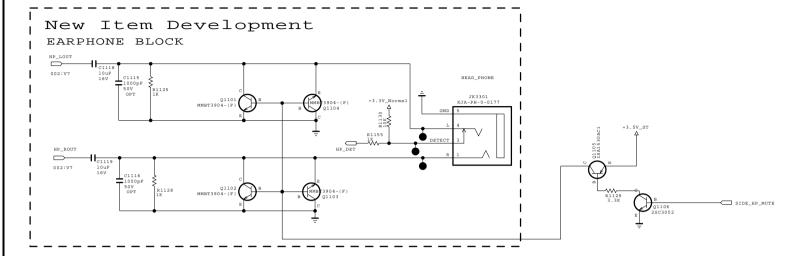

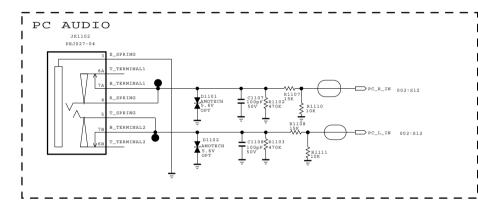

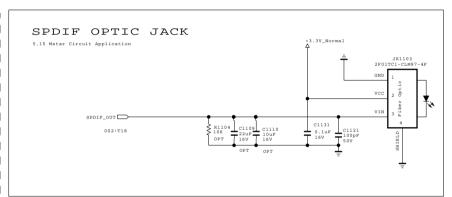


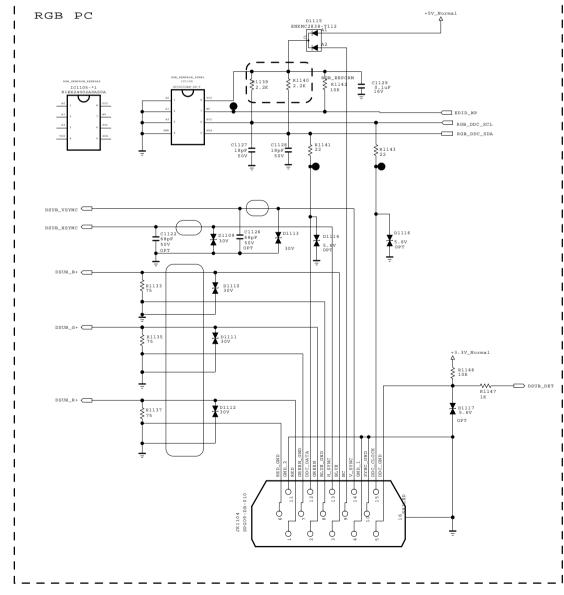

THE A SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE A SYMBOL MARK OF THE SCHEMETIC.





| MODEL | GP3_S7LR | DATE | 20110324 |
|-------|--------------|-------|----------|
| BLOCK | RGB/SPDIF/HP | SHEET | 9 |

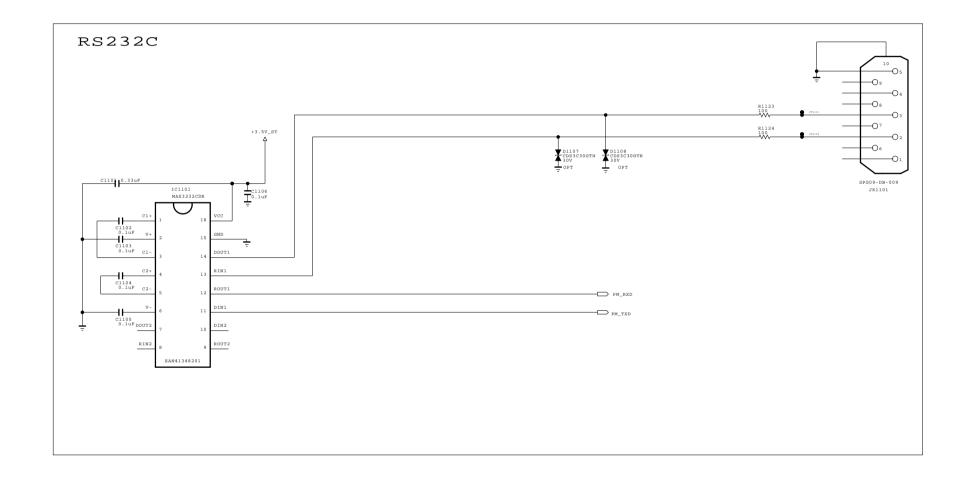




| MODEL | GP3_S7LR | DATE | 20110324 |
|-------|-------------|-------|----------|
| BLOCK | RS232C_9PIN | SHEET | 10 |

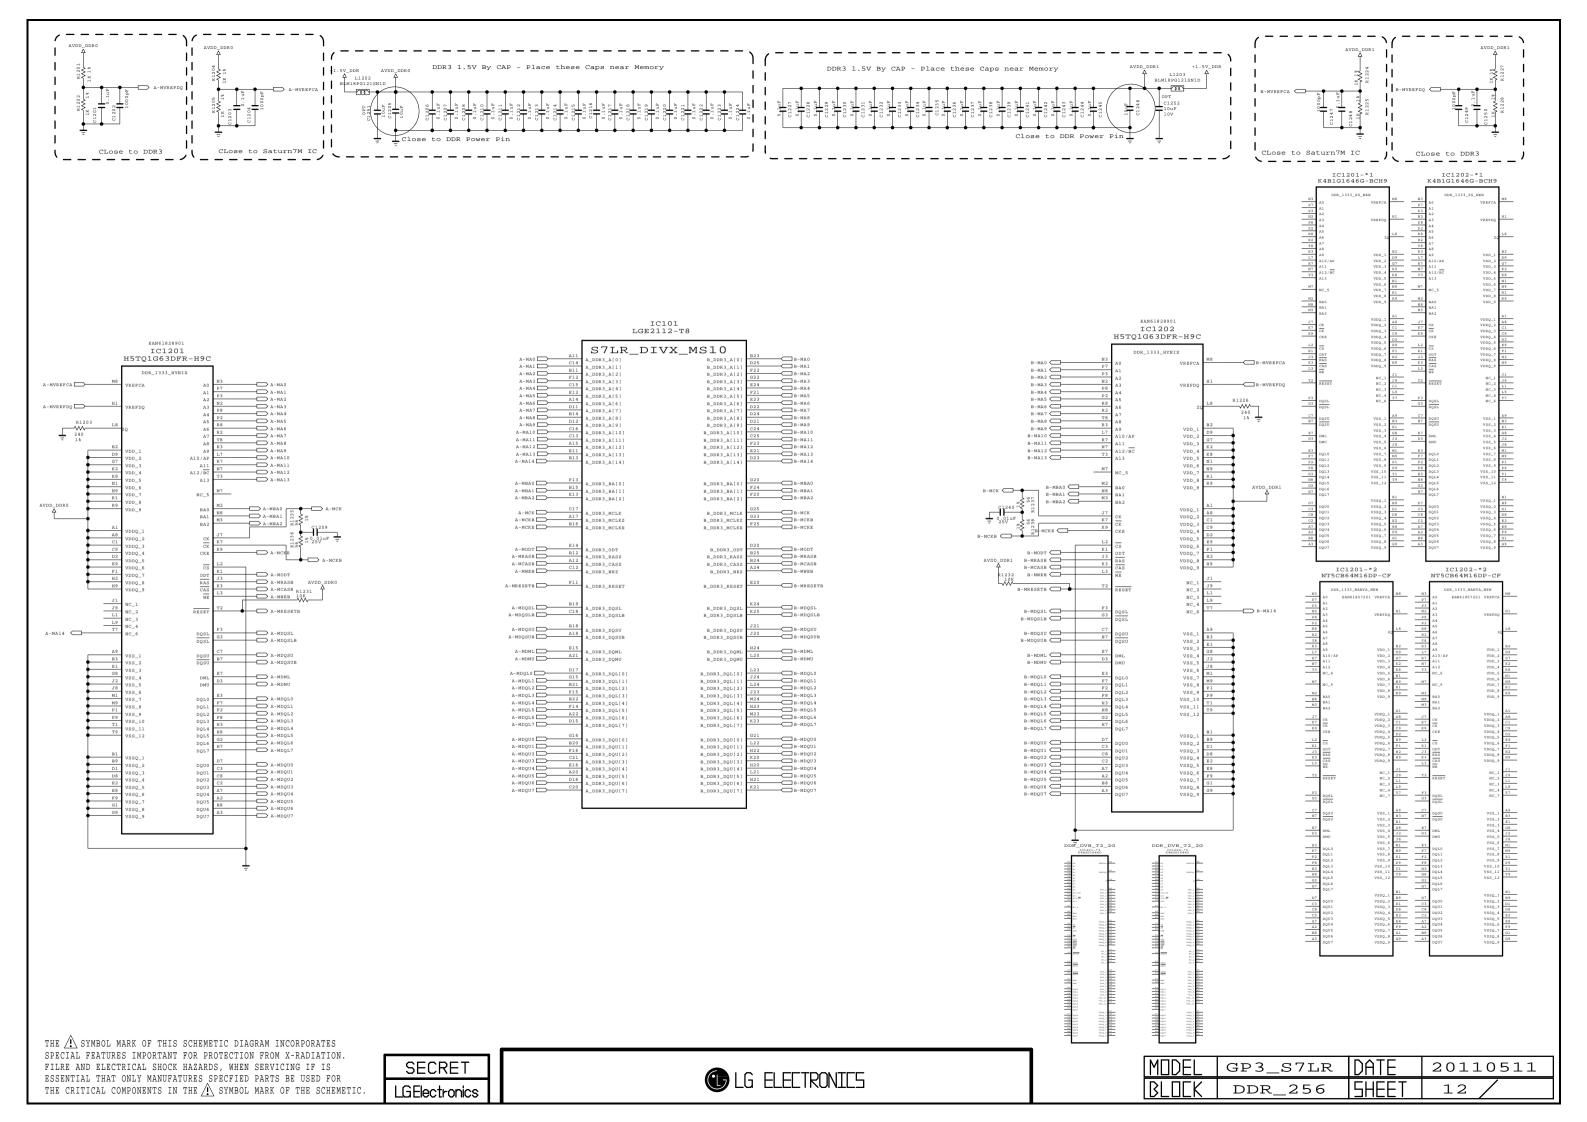


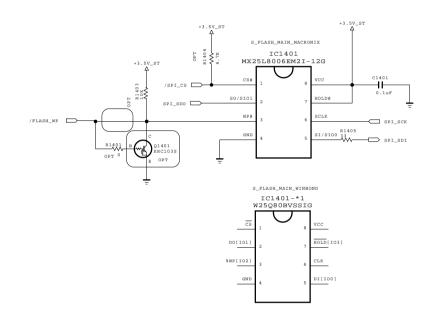




| <u> MODEL</u> | GP3 S7LR | <u>IDATE</u> | 20110324 |
|---------------|----------|--------------|----------|
| BLOCK | SFLASH | SHEET | 13/ |

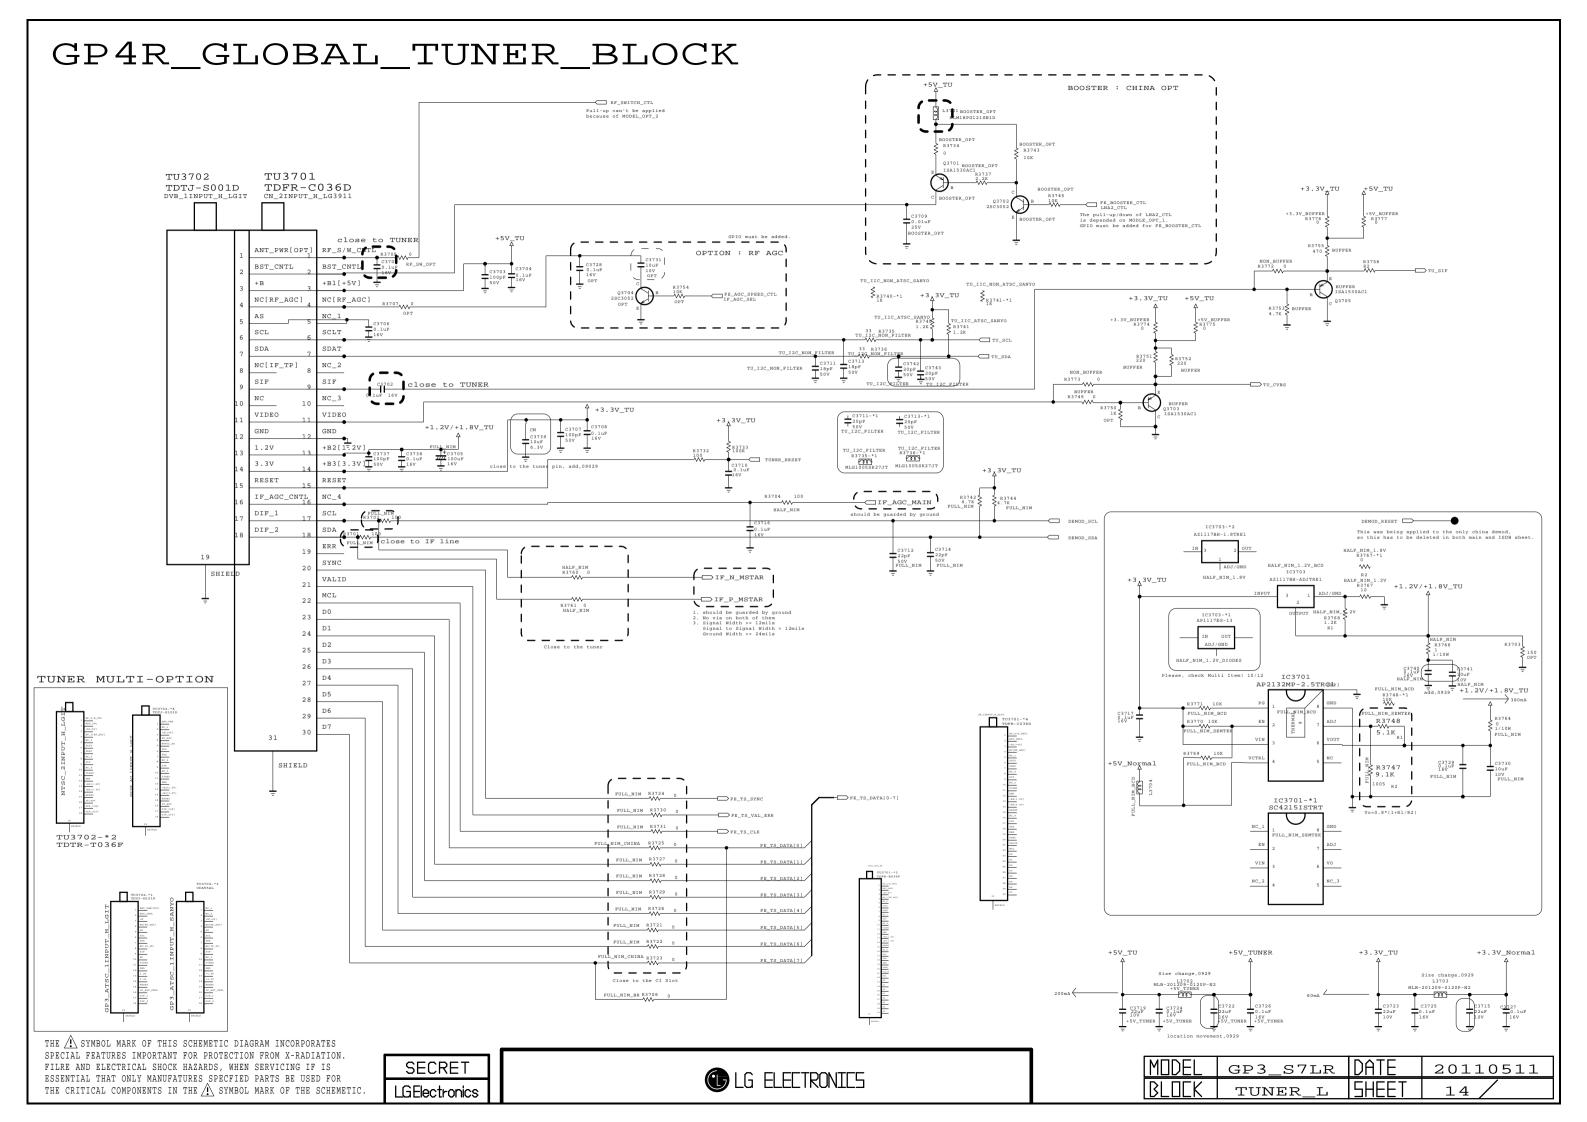

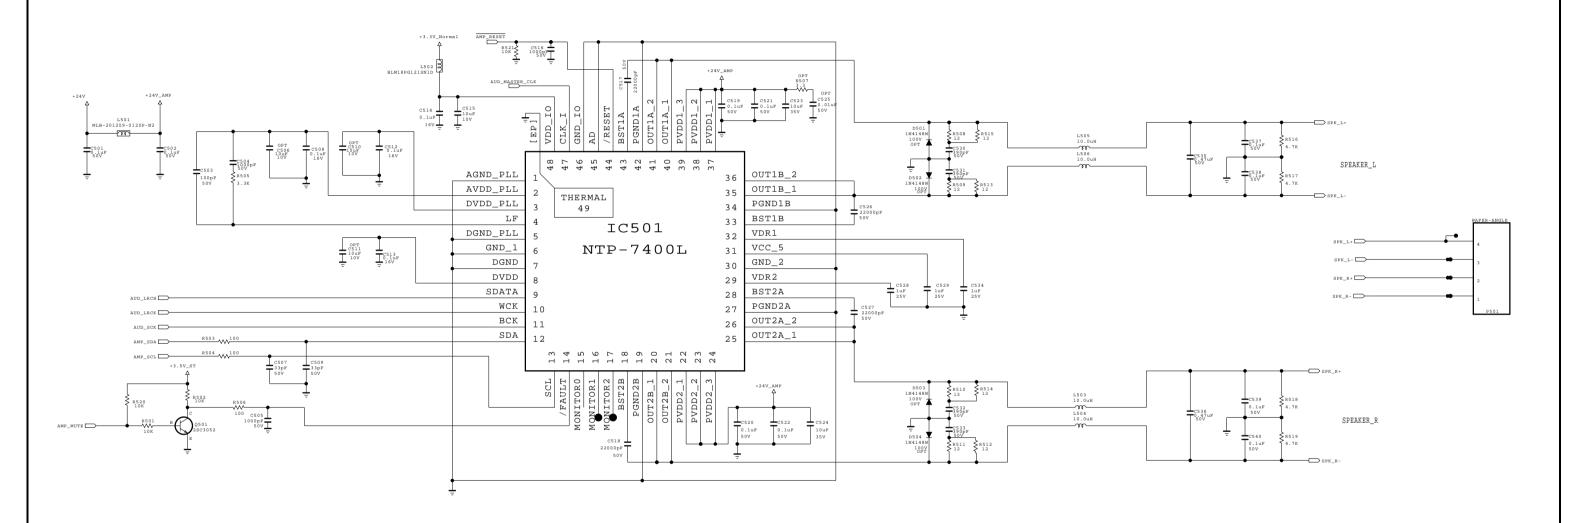






| MODEL | GP3 S7LR | DATE | 20110324 |
|-------|----------|-------|----------|
| BLOCK | NTP7400 | SHEET | 16/ |

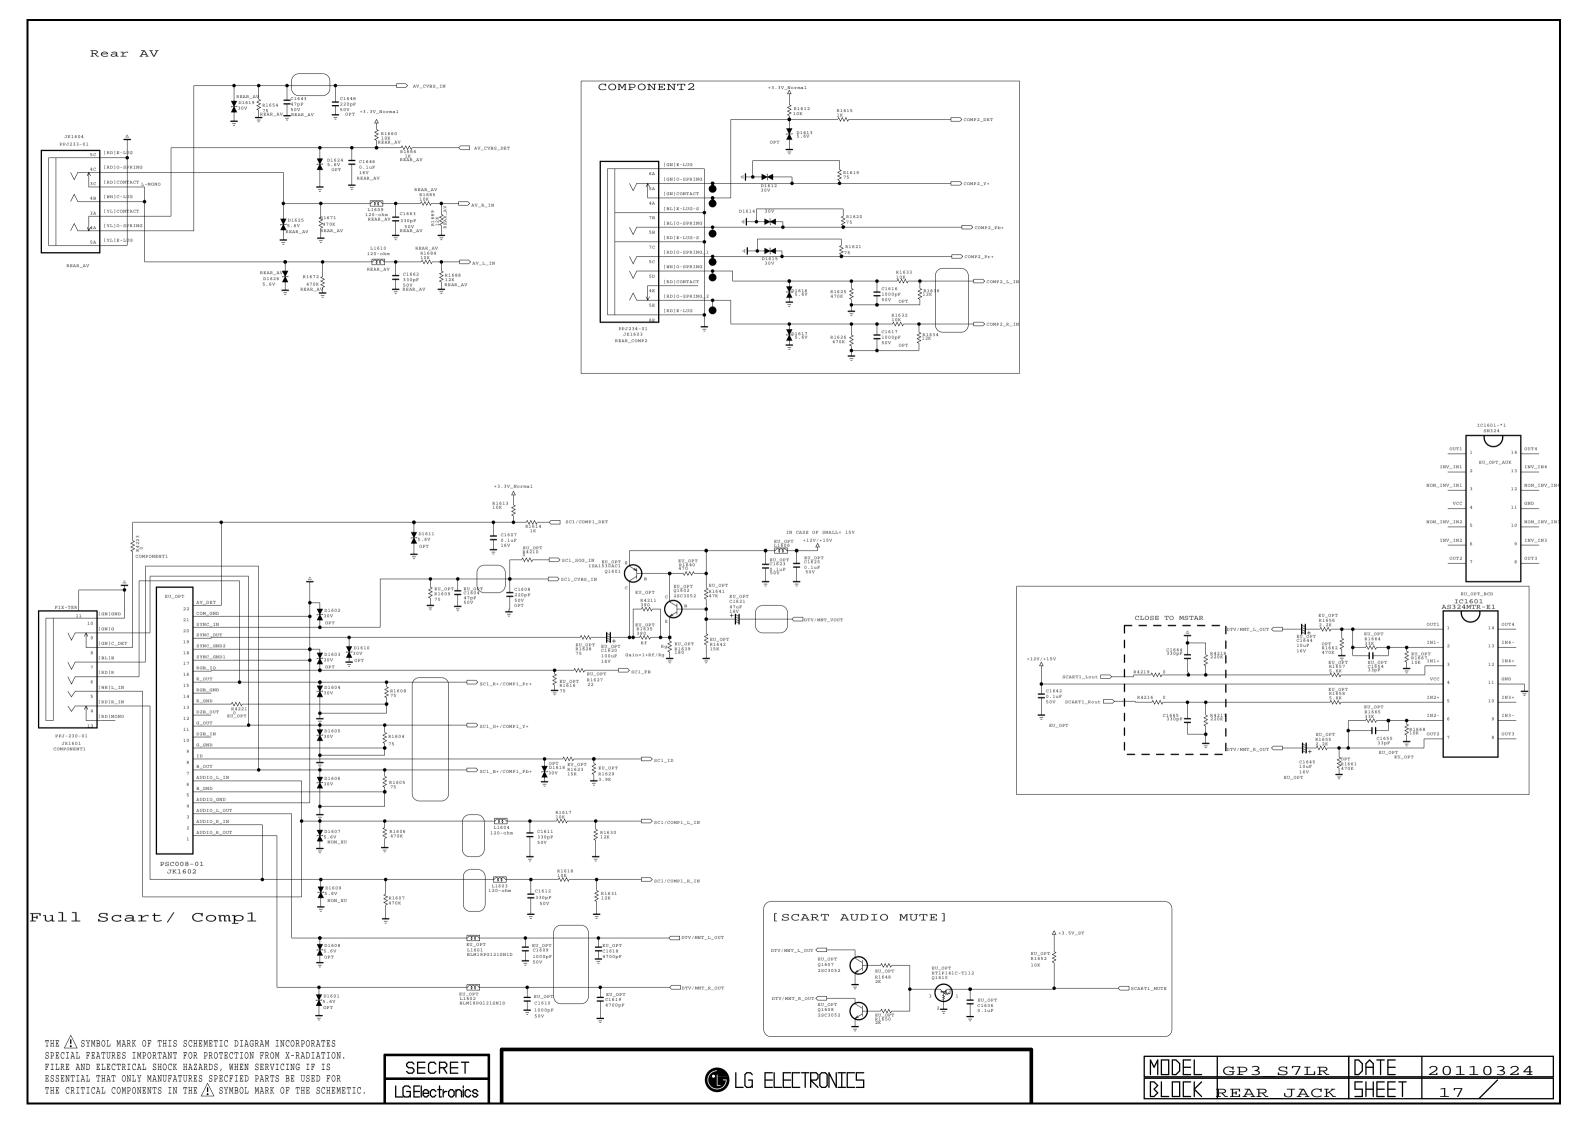




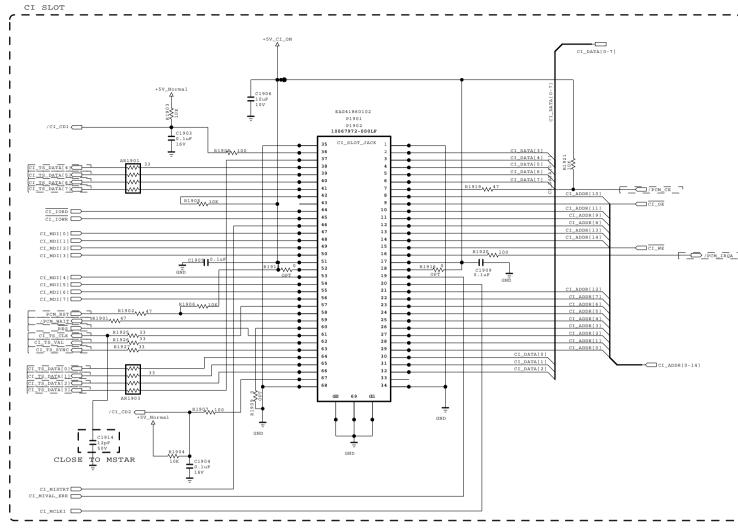

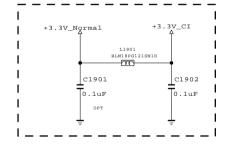

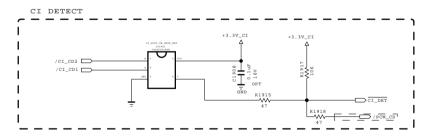


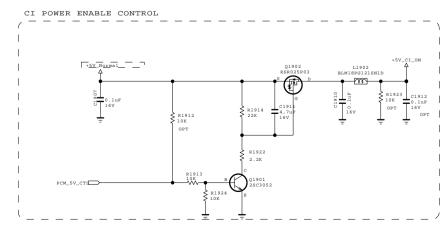






* Option name of this page : CI_SLOT (because of Hong Kong)

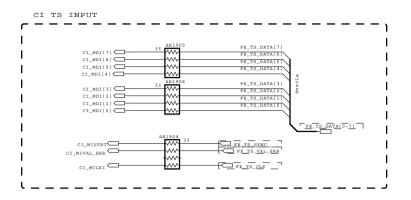


CI HOST I/F

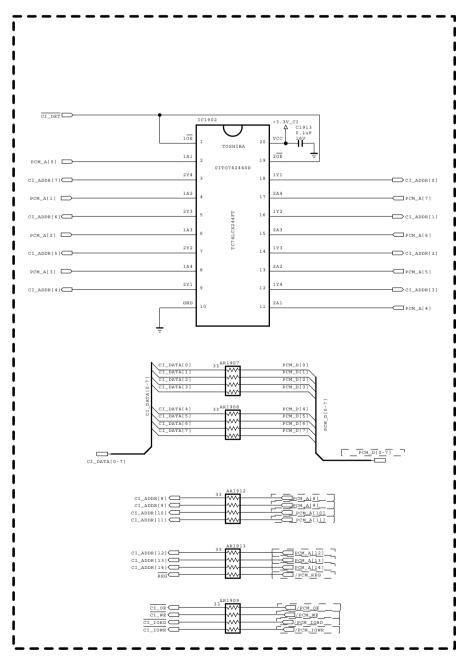

MODEL GP3_S7LR DATE 20110324
BLOCK PCMCI SHEET 20/


SMD GASKET

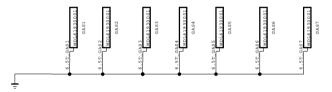

THE \(\hat{\Lambda}\) SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE \(\hat{\Lambda}\) SYMBOL MARK OF THE SCHEMETIC.



| MODEL | GP3_S7LR | DATE | 20110324 |
|-------|----------|-------|----------|
| BLOCK | SMD_GAS | SHEET | 20 / |

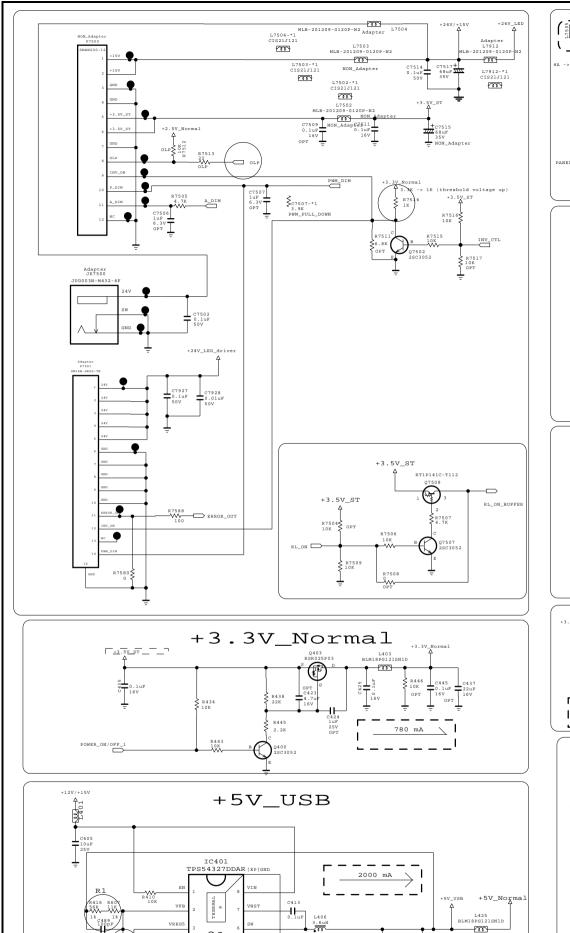

Vout=(1+R1/R2)*0.765=5.03V


SECRET


LGElectronics


THE A SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION.


FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS


ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE A SYMBOL MARK OF THE SCHEMETIC.

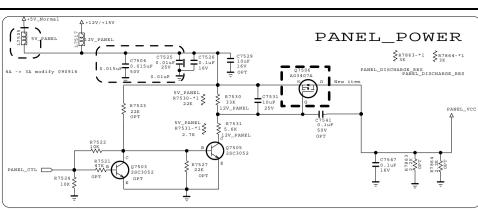


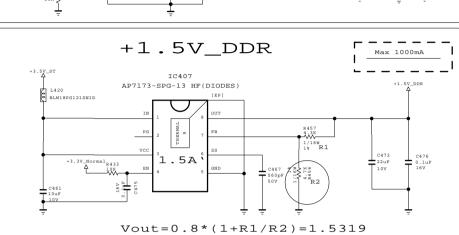


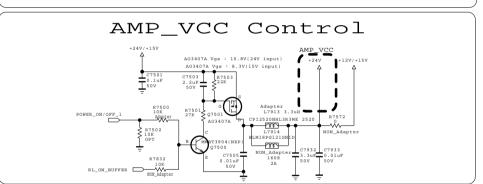


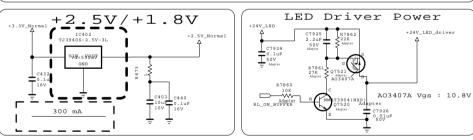


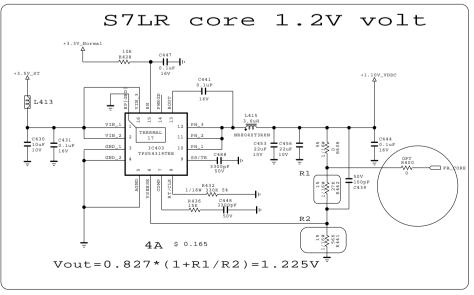


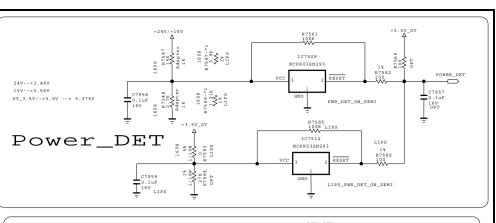

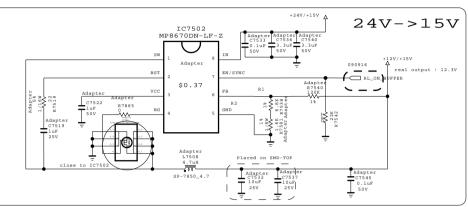

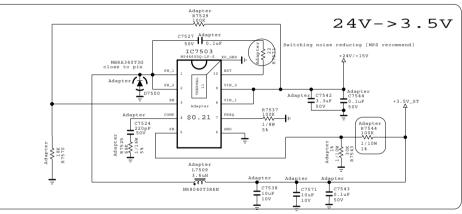

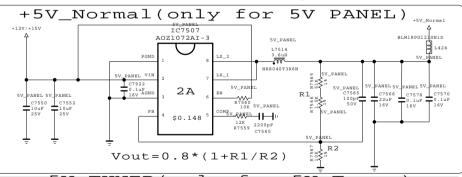

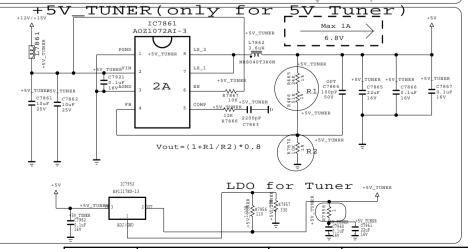


MODEL S7LR Small DATE 2011.03.02.

BLOCK POWER SHEET 22



CONTROL IR & LED

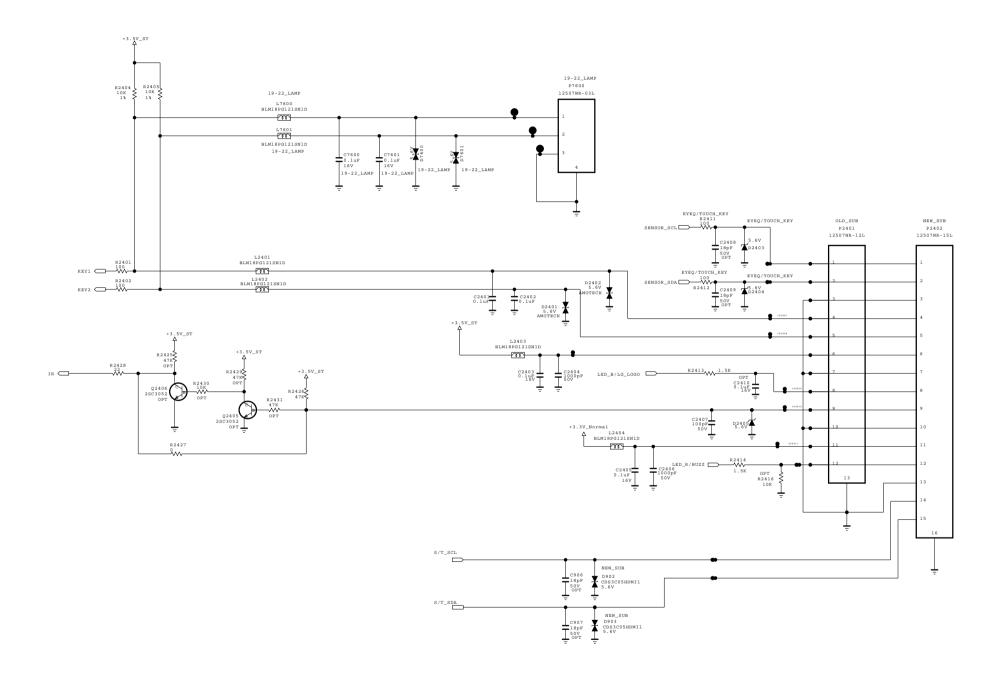

THE A SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE A SYMBOL MARK OF THE SCHEMETIC.





| MODEL | S7LR.Small | DATE | 2011.03.02. |
|-------|------------|-------|-------------|
| BLOCK | IR/CONTROL | SHEET | 6 |


SECRET LGElectronics




MODEL S7LR.Small DATE 2011.03.02.
BLOCK LVDS.Small SHEET 24

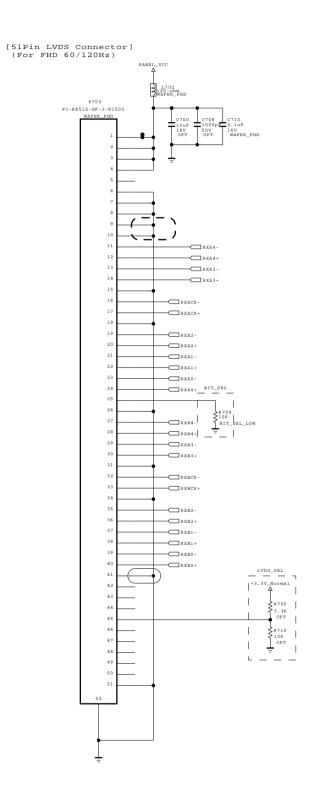

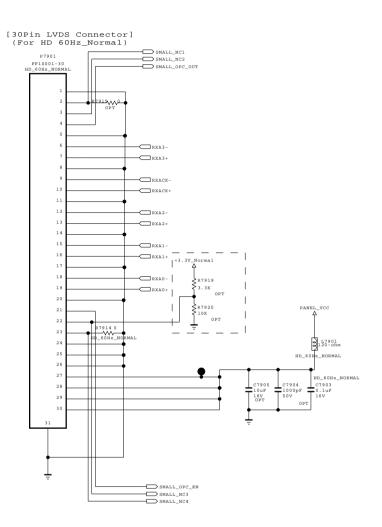

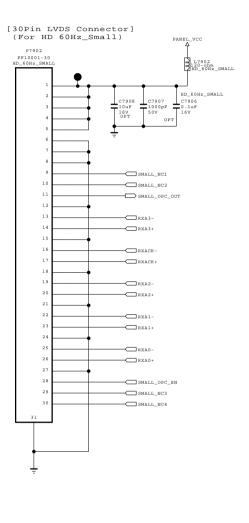

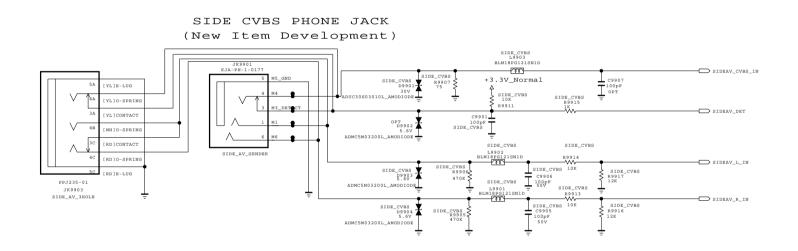



| MODEL | GP3_S7LR | DATE | 20110324 |
|-------|-----------|-------|----------|
| BLOCK | SIDE_JACK | SHEET | 18 / |



Block Diagram: S7LR

